#### DataSheet


# MT-T322

#### 2-Port, High-Speed CAN FD Module

This document contains the specifications for MT-T322.Specifications are typical at 25°C unless otherwise noted.



**Caution** Using the MT-T322 in a manner not described in this document may impair the protection the MT-T322 provides.

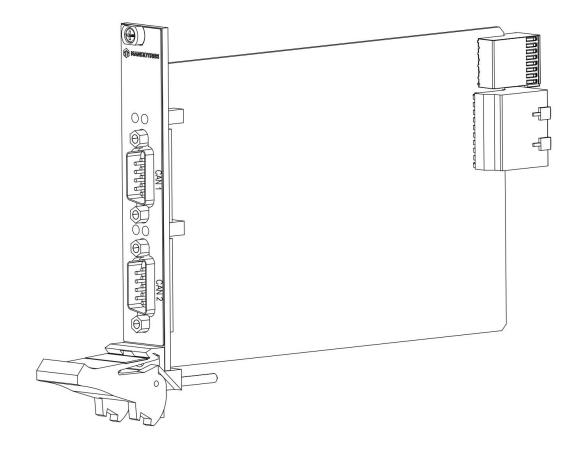



## MT-T322 Connectivity

Pin assignments for CAN1 and CAN2.

Connector	Pin	Signal
6 7 8 9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	1	NC
	2	CAN_L
	3	СОМ
	4	NC
	5	SHLD
	6	СОМ
	7	CAN_H
	8	NC
	9	NC

#### Hardware Overview

MT-T322 has two 9-pin male D-Sub connectors that provide connections to a CAN bus. Each port on the MT-T322 has pins for CAN\_H and CAN\_L, to which you connect the CAN bus signals.

These signals should be connected using twisted-pair cable.

## Characteristics

The following specifications are typical for the range -40 °C to 70 °C unless otherwise noted.

Maximum baud rate	8 Mbps
CAN_H, CAN_L bus lines voltage	-27VDC to +40 VDC
CAN FD controller	mixed CAN 2.0B and CAN FD mode
High-Speed CAN FD transceiver	ISO/DIS-11898-2:2015 standard

#### **Power Requirements**

Power consumption from chassis625 mW maxThermal dissipation (at 70 °C)1 W max

## Safety Voltages

Connect only voltages that are within the following limits:

Port-to-COM	-27 to +40 VDC max, Measurement Category I	
Isolation Voltages		
Port-to-earth ground		
Continuous	60 VDC, Measurement Category I up to 5,000 m in altitude	
Withstand up to 2,000 m	1,000 Vrms, verified by a 5 s dielectric withstand test	
Withstand up to 5,000 m	500 Vrms, verified by a 5 s dielectric withstand test	

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as MAINS voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low- voltage sources, and electronics.

## CE Compliance $\mathbf{C}\mathbf{\epsilon}$

This product meets the essential requirements of applicable European Directives, as follows:

- 2014/35/EU; Low-Voltage Directive (safety)
- 2014/30/EU; Electromagnetic Compatibility Directive (EMC)
- 2014/34/EU; Potentially Explosive Atmospheres (ATEX)

#### Shock and Vibration

To meet these specifications, you must panel mount the system.

Operating vibration	
Random (IEC 60068-2-64)	5 $g_{rms}$ , 10 Hz to 500 Hz
Sinusoidal (IEC 60068-2-6)	5 g, 10 Hz to 500 Hz
Operating shock (IEC 60068-2-27)	30 g, 11 ms half sine; 50 g, 3 ms half sine; 18 shocks at 6 orientations

#### Environmental

Refer to the manual for the chassis you are using for more information about meeting these

specifications.	
Operating temperature	-40 °C to 70 °C
	(IEC 60068-2-1, IEC 60068-2-2)
Storage temperature	-40 °C to 85 °C
	(IEC 60068-2-1, IEC 60068-2-2)
Ingress protection	IP40
Operating humidity (IEC 60068-2-78)	10% RH to 90% RH, noncondensing Storage
humidity (IEC 60068-2-78)	5% RH to 95% RH, noncondensing Pollution
Degree	2
Maximum altitude	5,000 m

Indoor use only.

#### Config文本

MT-DAQ设备的开发和使用依赖于Config配置文本,只有正确配置该文本,才能保证设备的正常运行。不同型号的设备或板卡对应的配置参数是不同的。Python、LabVIEW和C#三种编程语言的Config配置文本完全相同。

通用Config配置文本通过MT-Master软件主页导出获得,用户可以根据实际设备或板卡的参数对配置文本进行修改配置,或者按照文本默认参数配置运行。

Config配置文本中的各项参数含义及其具体配置可以参考MT-DAQ上手指南,指南链接附 于下文Support板块。

使用MT产品过程中如有任何疑问,可以通过访问官网:<u>http://www.mangotree.cn</u>联系专业 客服咨询。



### Support

MT-Master上手指南:

https://server.mangotree.cn:9900/WebFile/Downloads/上手指南/MT-Master/



Master上手指南

MT-Master视频教程:

https://server.mangotree.cn:9900/WebFile/Downloads/视频教程/MT-Master/



Master视频教程

MT-DAQ上手指南:

https://server.mangotree.cn:9900/WebFile/Downloads/上手指南/MT-DAQ/



MT-DAQ视频教程:

https://server.mangotree.cn:9900/WebFile/Downloads/视频教程/MT-DAQ/



#### Dimensions

