DataSheet


MT-E796

E Series GPS and BeiDou Synchronization Module

This document contains the specifications for MT-E796. Specifications are typical at 25°C unless otherwise noted.



Caution Using the MT-E796 in a manner not described in this document may impair the protection the MT-E796 provides.

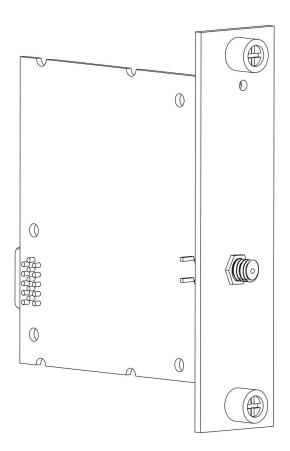



Connecting the MT-E796

The MT-E796 has one SMA female connector on its front panel for a GPS active antenna. The connector provides a DC voltage to power the antenna and also serves as input for the GPS RF signal.

Installing the Antenna

The embedded GPS receiver in the MT-E796 requires signals from several satellites to compute accurate timing and location. The more satellites available to the receiver, the more accurately it can determine time and location. Therefore, the antenna location should be such that it receives signals from the greatest number of satellites possible. As the number of satellites visible to the antenna decreases, the synchronization performance may also decrease. Choose the antenna location so that the antenna has a clear view of the sky. There is no strict definition for a clear view of the sky, but a suitable guideline is that the GPS antenna should have a straight line of sight to the sky in all directions (360°) down to an imaginary line making a 30° angle with the ground. Locations far from trees and tall buildings that could block or reflect GPS satellite signals are best.

Maximum Cable Lenth

Maximum cable length depends on the GPS antenna gain and the Cable's loss per unit of distance. We recommends a GPS signal strength of between -135 dBm and -120 dBm at the MT E796 SMA input. GPS signal strength on the Earth's surface is typically -130 dBm. Targeting a signal strength of -125 dBm at the SMA input, you can compute the maximum cable length as:

```
Max_cable_loss = -130 dBm + antenna_gain - (-125 dBm)

Max_cable_length = Max_cable_loss /

(loss_per_unit_of_distance)
```

For example, if you use an active antenna with gain of 28 dB and RG-58 cable, which has a rated loss at 1.5 GHz of about 0.8 dB/m (24.5 dB/100 ft), the maximum cable length you could use is:

Max_cable_loss = -130 dBm + 28 dB - (-125 dBm) = 23 dB
Max_cable_length = 23 dB /
$$(0.8 dB/m) \approx 29 m$$

MT-E796 Specifications

The following specifications are typical for the range -40 °C to 70 °C unless otherwise noted.

Signal type GPS L1 C/A

BeiDou B1 C/A

GPS signal frequency 1575.42±1.023MHz

BeiDou signal frequency 1561.098±2.046MHz

Sensitivity

Acquisition -148dBm

Reacquisition -163dBm

Tracking -165dBm

Recommended signal strength at SMA -135 dBm to -120 dBm

Input impedance 50Ω , nominal

Accuracy of 1PPS Signal Typical accuracy < 10 ns

Passive Antenna

Frequency Range: 1559MHz-1609 MHz

VSWR: <2 (Typ.)

Polarization: RHCP or Linear

Gain: >0dBi

Active Antenna

Frequency Range: 1559MHz-1609 MHz

VSWR: <2 (Typ.)

Polarization: RHCP or Linear

Noise figure: <1.5dB Gain (antenna): >0 dBi

Gain (embedded LNA): <17dB (Typ.)

Power Requirements

Power consumption from chassis	150 mW max
Thermal dissipation (at 70 °C)	550 mW max

CE Compliance (€

This product meets the essential requirements of applicable European Directives, as follows:

- 2014/35/EU; Low-Voltage Directive (safety)
- 2014/30/EU; Electromagnetic Compatibility Directive (EMC)
- 2014/34/EU; Potentially Explosive Atmospheres (ATEX)

Shock and Vibration

To meet these specifications, you must panel mount the system.

Operating vibration	
Random (IEC 60068-2-64)	5 g _{rms} , 10 Hz to 500 Hz
Sinusoidal (IEC 60068-2-6)	5 g, 10 Hz to 500 Hz
Operating shock (IEC 60068-2-27)	30 g, 11 ms half sine; 50 g, 3 ms half sine; 18 shocks at 6 orientations

Environmental

Refer to the manual for the chassis you are using for more information about meeting these specifications.

-40 °C to 70 °C (IEC 60068-2-1, IEC 60068-2-2)
-40 °C to 85 °C (IEC 60068-2-1, IEC 60068-2-2)
IP40
10% RH to 90% RH, noncondensing Storage
5% RH to 95% RH, noncondensing Pollution
2
5,000 m

Indoor use only.

Support

MT-Master上手指南:

https://server.mangotree.cn:9900/WebFile/Downloads/上手指南/MT-Master/



Master上手指南

MT-Master视频教程:

https://server.mangotree.cn:9900/WebFile/Downloads/视频教程/MT-Master/



Master视频教程

MT-RIO上手指南:

https://server.mangotree.cn:9900/WebFile/Downloads/上手指南/MT-RIO/



RIO上手指南

MT-RIO视频教程:

https://server.mangotree.cn:9900/WebFile/Downloads/视频教程/MT-RIO/



RIO视频教程

Dimensions:(mm)

